

## STEP 1: Connect to a Wireless Network

This Quick Start Guide covers the most common type of wireless network connection. If your wireless network requires manual configuration refer to the User Guide. Also refer to the "Troubleshooting" section in the User Guide if you encounter any problems.

Turning the **TUNE knob** scrolls through menus and lists to highlight items, and pressing the **TUNE knob** selects a highlighted item.

### Connect to a Wireless Network


- Plug the AC Power Adapter into an AC outlet, and plug the power plug into the connector on the rear of the SiriusXM Sound Station. Press the **Power** button if the Sound Station does not turn on automatically.
- The Network Wizard screen will be displayed, with **Wireless** highlighted. Press the **TUNE knob** to select.
- On the **Wireless** screen, **Scan** will be highlighted. Press the **TUNE knob** to select.
- Wait while the Sound Station scans for wireless networks and then select your wireless network from the list. Turn the **TUNE knob** to highlight your wireless network and then press the **TUNE knob** to select.
- The Sound Station will attempt to connect to the wireless network. If you chose a network that requires a password, you will be prompted to enter the network password. Password will be highlighted. Press the **TUNE knob** to begin entering the password. Otherwise, the Sound Station will attempt to connect to the wireless network.
- To enter the network password, turn the **TUNE knob** to highlight each character of the password and press the **TUNE knob** to select the character. Then enter the next character and continue until you have finished entering the password. If you make an error, press the **Delete** button to erase the character. When you have completed entering the network password, press the **Submit** button.
- When the Sound Station has successfully connected to the wireless network, "Connected successfully" will be displayed. Continue with step 2.



## STEP 2: Enter Your SiriusXM Account Information

### Enter Your SiriusXM Streaming User Name and Password

- Next you will be prompted to enter your SiriusXM streaming username. Highlight Username and press the **TUNE knob**. Then enter each character in your username. When complete press the **Submit** button. Your username is case sensitive.
- Next enter your SiriusXM password. Highlight Password and press the **TUNE knob**. Then enter each character in your password. When complete press the **Submit** button. Your password is case sensitive.
- The Sound Station will check your SiriusXM username and password. If correct, "SiriusXM credentials accepted" will be briefly displayed.
- Next you will be prompted to select your time zone. Turn the **TUNE knob** to highlight your time zone and press the **TUNE knob** to select.
- If you are prompted that an Internet Update is available, allow the update to install. Turn the **TUNE knob** to highlight Install Update and press the **TUNE knob** to select. Wait until the update has completed and you see the message, "Please press the Power button".
- The installation is complete. Press the power button if the Sound Station is in Standby mode. The radio home screen will be shown. Scroll the **TUNE knob** until you are on the Category icon and press the **TUNE knob**. Turn the **TUNE knob** to highlight a category and press the **TUNE knob** to display a list of channels. Turn the **TUNE knob** to highlight a channel and press the **TUNE knob** to tune the channel.

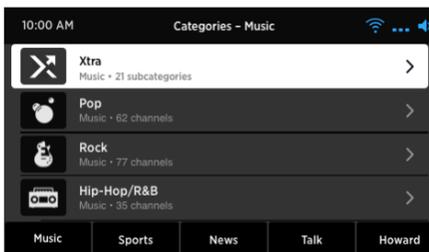

**IMPORTANT!** In order to use the SiriusXM Sound Station you must have a SiriusXM subscription package that includes streaming. If you don't have a subscription that includes streaming, you can add it to your existing SiriusXM package or subscribe to streaming only. To subscribe, go to [siriusxm.com/streaming](http://siriusxm.com/streaming) or call 866-635-2349.

**IMPORTANT!** The Sound Station doesn't have a Radio ID or ESN. You must use your streaming user name and password to log in.

**TIP!** To verify that you are subscribed to SiriusXM streaming, listen online: Go online to [siriusxm.com/streaming](http://siriusxm.com/streaming). Click on the **Listen Now** link, enter your username and password, and click **Login**. If you can listen, then you are subscribed to stream SiriusXM.

## Sound Station Functions

### TUNE Knob (Multifunction)

Turning the knob at the Now Playing screen displays the Channel Listing screen; pressing the knob at the Now Playing screen displays the Direct Tune screen; turning the knob in a menu or user input screen scrolls through and highlights menus and choices; pressing the knob in a menu or user input screen selects the highlighted item.

### HOME Button


Press to access the menu for listening modes and configuration options.

### Now Playing Button


Press to return to the Now Playing screen. While at the Now Playing screen, press to learn more about the channel, show, or artist, and for additional selection options.

### P1-P10 Buttons


Press to tune to a favorite channel; press and hold to set the current channel as a favorite channel.

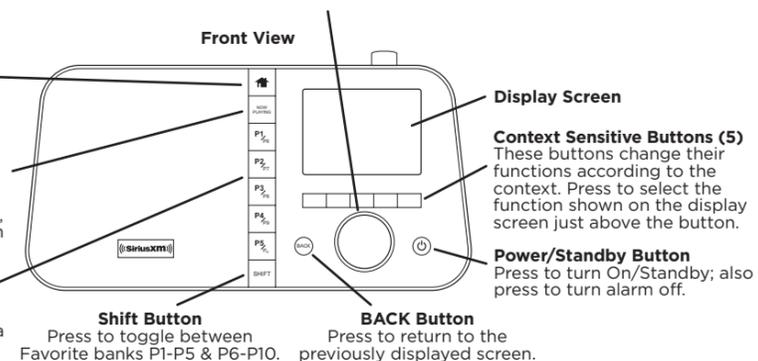


### Top View

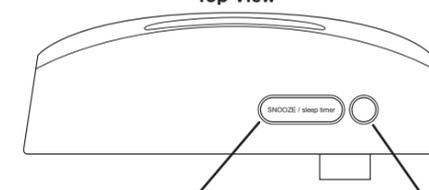

### Side View

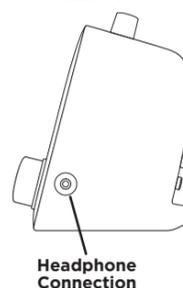

### Rear View

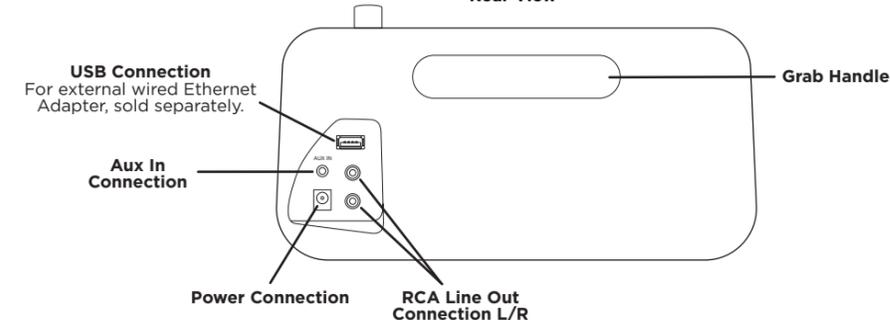

The TTR3 Sound Station User Guide is available at [www.siriusxm.com/guides](http://www.siriusxm.com/guides).

## Alarm Clock, Sleep and Snooze Timer

### Alarm Clock

The Sound Station has five alarm clocks, each of which can be configured independently.

#### To Add or Modify an alarm:

- Turn the **TUNE knob** to highlight **Settings** and press to select. Turn **TUNE knob** to highlight **Clock & Alarms** and press to select. Turn **TUNE knob** to highlight **Alarm** and press to select.
- To add an alarm, press the **Add New Alarm** button, or to modify an alarm, turn the **TUNE knob** to highlight an alarm and press the **Modify Alarm** button.
- Each alarm has configuration options which are summarized in the following table. Turn the **TUNE knob** to highlight a configuration option and press it to select. Then turn the **TUNE knob** to change a setting and press it to confirm the setting.

Alarm Time	12:00 AM - 11:59 PM	Turn the <b>TUNE knob</b> to adjust the hour setting and press the <b>TUNE knob</b> to select. Turn the <b>TUNE knob</b> to adjust the minutes setting and press the <b>TUNE knob</b> to select.
Repeat	One Time, Everyday, Weekly, Weekdays, Weekends, Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, or Saturday	Turn the <b>TUNE knob</b> to highlight the frequency of the alarm and press the <b>TUNE knob</b> to select.
Alarm Channel	Buzzer, or choose a channel	Turn the <b>TUNE knob</b> to highlight what you want to wake up to, and press the <b>TUNE knob</b> to select.
Volume	Variable	Turn the <b>TUNE knob</b> to adjust the volume of the alarm and press the <b>TUNE knob</b> to select.

- When you finish configuring the alarm, turn the **TUNE Knob** to highlight "Add alarm" and press the **TUNE Knob**. An advisory message will be displayed confirming the action selected.

#### To Remove, Modify, Enable, or Disable alarms:

- Turn the **TUNE knob** to highlight **Settings** and press to select. Turn **TUNE knob** to highlight **Clock & Alarms** and press to select. Turn **TUNE knob** to highlight **Alarm** and press to select.
- Turn the **TUNE knob** to highlight an alarm from the list and press the **Remove, Modify, Enable, or Disable** button. An advisory message will be displayed confirming the action selected.

#### To Cancel an alarm:

- When the radio is in standby, press and hold the **Home** button for 2 seconds. The alarm icon will be removed from the display screen temporarily until after the scheduled time of the alarm has passed. This function only cancels the upcoming alarm, not the alarm series.

### Snooze Timer

When the alarm sounds, pressing the **Snooze/Sleep Timer** button will silence the alarm for 10 minutes, or you can select a custom amount of time. After the snooze time elapses, the alarm will sound again.

#### To Snooze:

- When the alarm clock is sounding, press the **Snooze/Sleep Timer** button on the top of the Sound Station once to select the default snooze time of 10 minutes. To select a longer snooze time, press the **Snooze/Sleep Timer** button again to increase the time by 10 minutes. Each time the button is pressed the snooze time is increased by an additional 10 minutes.
- Alternately you can also select a custom amount of snooze time. Press the **SLEEP/SNOOZE** button and turn the **TUNE knob** to configure the amount of time, hours first and then minutes. Turn the **TUNE knob** to select the time and press the **TUNE knob** to confirm.

Continued on opposite side...

## Alarm Clock, Snooze and Sleep Timer (continued)

### Sleep Timer

The sleep timer automatically turns the Sound Station off after a period of time as you fall asleep. The period of time can be set up to 24 hours.

#### To turn the Sleep Timer On:

- When the Sound Station is on, press the **Snooze/Sleep Timer** button on the top of the Sound Station once to select the default sleep time of 10 minutes. To select a longer time, press the **Snooze/Sleep Timer** button again to increase the time by 10 minutes. Each time the button is pressed the sleep time is increased by an additional 10 minutes.
- Alternately you can also select a custom amount of sleep time. Press the **Snooze/Sleep Timer** button and turn the **TUNE knob** to configure the amount of time, hours first and then minutes. Turn the **TUNE knob** to select the time and press the **TUNE knob** to confirm.


#### To cancel the Sleep Timer:

- To cancel the sleep timer, press the **Power** button. The advisory message **Sleep timer deactivated** will be displayed.


## Skipping Forward and Backward on Music Channels

If you are listening to a music channel, On Demand, or a Pandora Station, pressing the **Fast-Forward** button will skip to the next song (if listening behind live) and pressing the **Rewind** button will skip back to the previous song.


Music industry rules govern the number of skips per channel. When you have reached the skip limit, the Sound Station will display a message advising that you have reached the maximum number of skips for a period of time. You will have to wait until the time displayed on the advisory before you can again skip forward or backward.

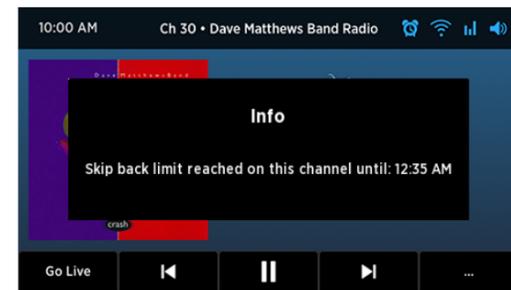


## What's in the Box?

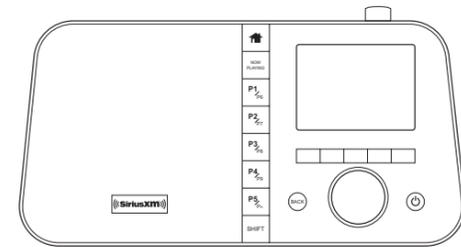

SiriusXM Sound Station

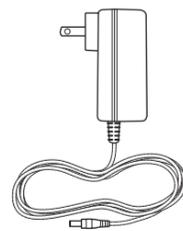

AC Power Adapter

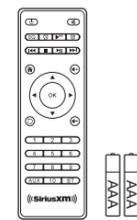


Remote Control & Batteries

## Sound Station Main Display Screens

### The Home Screen



### The Now Playing Screen

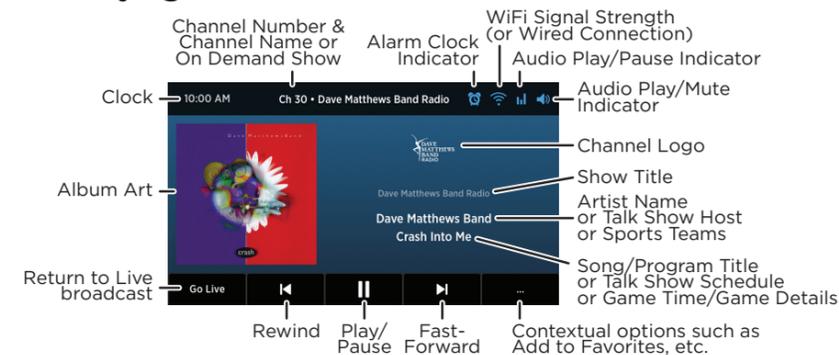

## Important Legal Notice

Hardware and subscription sold separately. All SiriusXM services require a subscription, each sold separately by SiriusXM. Some services and features are subject to device capabilities and location availability. All fees, content and features are subject to change. See our Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com). Our streaming service is available throughout our satellite service area and in AK and HI. Service available in Canada; see [www.siriusxm.ca](http://www.siriusxm.ca).

# SiriusXM TTR3 Sound Station

## Quick Start Guide

[siriusxm.com](http://siriusxm.com)

Sirius XM Radio Inc.  
1221 Avenue of the Americas  
New York, NY 10020

1.866.635.2349



© 2020 SiriusXM Radio Inc. SiriusXM, Pandora and all related logos are trademarks of Sirius XM Radio Inc. and its respective subsidiaries. Other marks, channel names and logos are the property of their respective owners. All rights reserved.

SXSSTTR3QSG200924a